

BIDIRECTIONAL GATEWAY OF ELEMENTS
ENOCLEAN / RS 232, RS 485 MODBUS RTU



OPERATING MANUAL

Contents

| | |
|--|----|
| Introduction | 3 |
| 1 Product description | 6 |
| 1.1 Function description | 6 |
| 1.2 Technical data | 7 |
| 1.3 Gateway dimension..... | 8 |
| 1.4 Electrical installation | 9 |
| 2 RS 485 communication settings | 11 |
| 3 MODBUS RTU communication description..... | 12 |
| 3.1 Register map | 12 |
| 3.1.1 Register map – data | 13 |
| 3.1.2 Register map – ID data | 14 |
| 3.1.3 Register map – current changes | 15 |
| 3.1.4 Register map – service data..... | 17 |
| 3.1.5 Register map – RAW data | 19 |
| 3.1.6 Register map – Pressac..... | 21 |
| 3.1.7 Register map – TX..... | 22 |
| 4 Supported functions..... | 23 |
| 5 Software tool EnOcean Tools | 24 |
| 6 Supported profiles of device (EEP) for receiving data | 24 |
| 6.1 Supported 4BS telegrams..... | 24 |
| 6.2 Supported RPS telegrams..... | 32 |
| 6.3 Supported 1BS telegrams..... | 33 |
| 6.4 Supported VLD telegrams | 34 |
| 6.5 Supported MSC telegrams..... | 36 |
| 7 Supported profiles of device (EEP) for transmitting data | 37 |
| 7.1 Supported 1BS telegrams..... | 37 |
| 7.2 Supported RPS telegrams..... | 37 |
| 7.3 Supported 4BS telegrams..... | 37 |
| 7.4 Supported VLD telegrams | 40 |
| 8 Saving characters for channels descriptions | 45 |
| 9 Revision history | 46 |

Introduction

This document describes operating manual for bidirectional gateway EnOcean / RS 232, RS 485 Modbus RTU.

Type of device

Bidirectional gateway for EnOcean / RS 232, RS 485 Modbus RTU.

- Receiving, control and managing of wide EnOcean elements spectrum (e.g. temperature, humidity, motion, CO2 sensors, indication of opened doors/windows, on and off switches, actors, control modules, measuring electric current).
- It can serve up to 40 elements EnOcean.
- Standardized for frequency 868 MHz, possible option is 902 MHz.
- Supplied with EnOcean Tools application for comprehensive review of information and elements control.

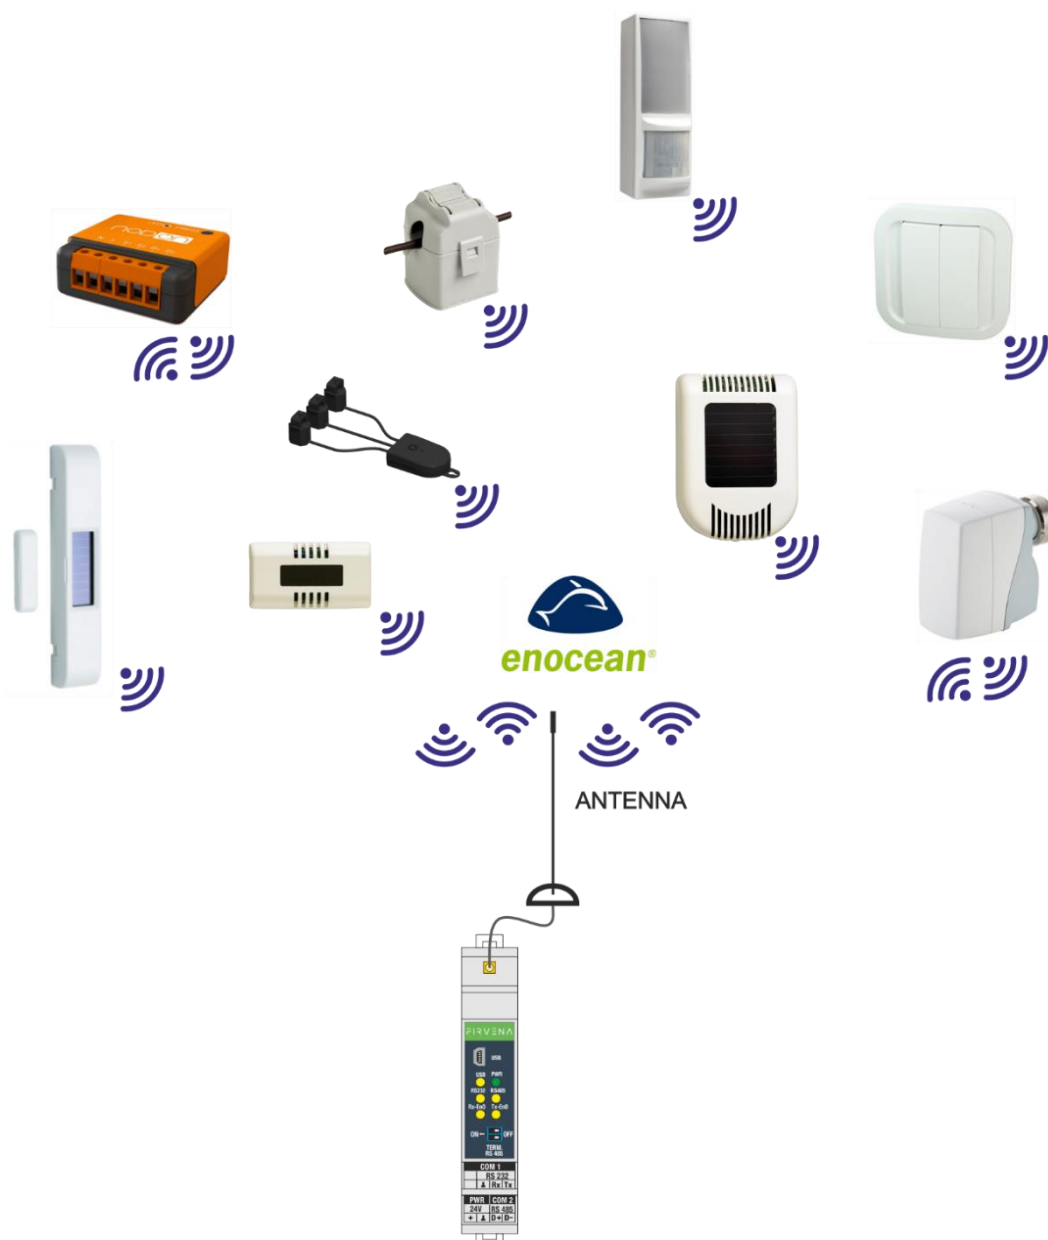


Fig. 1: Connecting gateway with EnOcean elements

Device name

ENOCEAN-GWY-MOD

Device manufacturer

FIRVENA s.r.o.

Address

Zamecke namesti 26
738 01 Frydek-Mistek
Czech Republic

Phone contact

+420 604 816 588

Email contact

brachacek@firvena.cz
firvena@firvena.cz

Websites

www.firvena.com

Electromagnetic compatibility EMC:

The product is in conformity with provisions of Government Regulation No. 117/2016 Coll. which are in compliance with Directive 2014/30/EU regarding electromagnetic compatibility (EMC).

Czech version of standard:

ČSN EN 55032 ed. 2:2017
ČSN EN 61000-6-2 ed.3:2006
ČSN EN 61000-4-2 ed.2:2009
ČSN EN 61000-4-3 ed.3:2006+A1:2008+A2:2011
ČSN EN 61000-4-4 ed.3:2013
ČSN EN 61000-4-5 ed.3:2015
ČSN EN 61000-4-6 ed.4:2014

Identical with European standard:

EN 55032:2015
EN 61000-6-2:2005
EN 61000-4-2:2009
EN 61000-4-3:2006+A1:2007+A2:2010
EN 61000-4-4:2012
EN 61000-4-5:2014
EN 61000-4-6:2014

Safety information and warnings



The product meets the general safety requirements according to ČSN EN 61010-1 ed. 2.
Cover IP 20 allows installation only in normal space according to ČSN 33 2000-1 ed. 2.

The gateway must be powered from safe voltage source that meets requirements of ČSN EN 61010-1 ed. 2 and must be installed in accordance with national and safety standards.

The product may be only used in accordance with this manual.

To avoid a risk of an electrical shock or fire, the maximum of gateway's operating parameters must not be exceeded.

Use only unmodified products.

It can be used types of cables with sufficient electrical strength for connection.

Storage

Store products at temperature 0-40 °C and relative humidity up to 80 %, and in spaces where condensation on products is eliminated. Products must not be exposed shocks, harmful vapors or gases.

Repairs

Products are repaired by the manufacturer. Products to be repaired are shipped in a package that ensures shock absorption and protects the products against damage during shipment.

Guarantee

The product is warranted 24 months from the date of delivery that is mentioned on the delivery note. The manufacturer guarantees technical and operational products parameters in the range of valid documentation. The warranty period runs from personal goods acceptance by the buyer or from the transport company. Claimed products and written claims for defects are claimed by the manufacturer during warranty period. The complainant shall provide products identification, number of delivery note and defects description. The manufacturer is not responsible for defects caused by improper storage, improper external connection, damages caused by external influences especially due to unacceptable size, incorrect adjustment, improper installation, incorrect operation or normal wear and tear.

Product disposal



Product does not belong to municipal waste and belongs to separate collection.

1 Product description

Front side of gateway for EnOcean / RS 232, RS 485 Modbus RTU has six LED diodes. Green LED diode marked with the symbol *PWR* is used for indication, if supply voltage is connected. For supply voltage connection, it lights green permanently. Yellow LED diodes indicate communication. Diode marked with USB indicates communication via USB interface. Diode marked with RS 232 indicates communication on the line RS 232. Diode marked with RS 485 indicate communication on the line RS 485 with the protocol MODBUS RTU. Diodes marked with Rx-EoN (receiving) and Tx-EoN (transmitting) are used for communication indication of EnOcean elements.

The gateway has two connectors for supplying DC supply voltage and connectors for communication with serial links RS 232 and RS 485. The gateway has also mini USB connector.

The gateway contains SMA connector for antenna connection.

Double DIP switch is used to balance idle state of the line RS 485 MODBUS RTU. For more information is written the chapter 3.

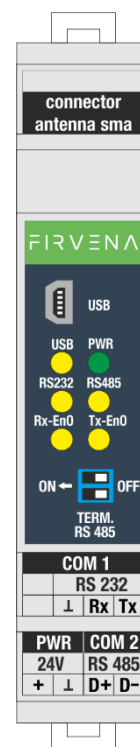


Fig. 2: Front side of the gateway ENOCEAN-GWY-MOD

1.1 Function description

The device ENOCEAN-GWY-MOD is gateway which wirelessly receives and controls elements through communication standard EnOcean and then communicates through communication interface RS 232 and RS 485 with the MODBUS RTU protocol. Gateway is designed for wide spectrum of elements with wireless EnOcean technology that is characterized with low consumption, frequent battery-free operation and use of alternative energy source.

Due to wireless technology, this solution finds its use in objects where the operation has been started or where new cables cannot be laid or if there is temporary rental space and the owner wants to take the device and elements with.

Gateway is able to transmit / receive all telegrams with type RPS/1BS, 4BS, VLD according to the specification EEP. Content of these telegrams is copied to registers. It is required for data in such format (RAW) knowledge of telegrams composition RORG and recalculation which burdens superior system. For this reason, there are converted values corresponding to the measured quantity for selected products. Selected products are being expanded according to actual needs of our customers.

1.2 Technical data

Tab. 1: Technical data of gateway

| | | |
|--|--|--|
| Electrical data | rated voltage | 24 V DC (recommended value for power supply) |
| | range possibility for power supply | 10 – 25 V DC |
| | own consumption of device | 80 mA |
| | power consumption | 1,92 W |
| Communication RS 232 | protocol | MODBUS RTU slave |
| | supported functions | 3, 6, 16 |
| | baudrate | optional from 1,2 kBd to 115,2 kBd |
| | number of bits | 8 |
| | stopbit | 1, 2 |
| | parity | no, even, odd |
| | delay between received and sent message | basic + optional 0...200ms |
| | adjustable addresses | 1...247 |
| | max. number of device on the line | 1 |
| | indication | yes, LED yellow colour RS 232 |
| | | |
| Communication RS 485 | protocol | MODBUS RTU slave |
| | supported functions | 3, 6, 16 |
| | baudrate | optional from 1,2 kBd to 115,2 kBd |
| | number of bits | 8 |
| | stopbit | 1, 2 |
| | parity | no, even, odd |
| | delay between received and sent message | basic + optional 0...200ms |
| | adjustable addresses | 1...32 247 |
| | max. number of device on the line | 32 |
| | indication | yes LED yellow colour RS 485 |
| | | |
| Communication USB | protocol | MODBUS RTU slave |
| | supported functions | 3, 6, 16 |
| | baudrate | 115,2 kBd |
| | number of bits | 8 |
| | stopbit | 1 |
| | parity | no |
| | adjustable addresses | 1 |
| | max. number of device on the line | 1 |
| | indication | yes LED yellow colour USB |
| Number of EnOcean elements | Maximum number of EnOcean elements for 1 GWY | 40 |
| Supported elements of communication | RAW DATA: RPS/1BS, 4BS, VLD | |
| Operating valus | cover | IP 20 |
| | operating temperature | -20 ... +70°C |
| | relative air humidity | max. 80 % |

1.3 Gateway dimension

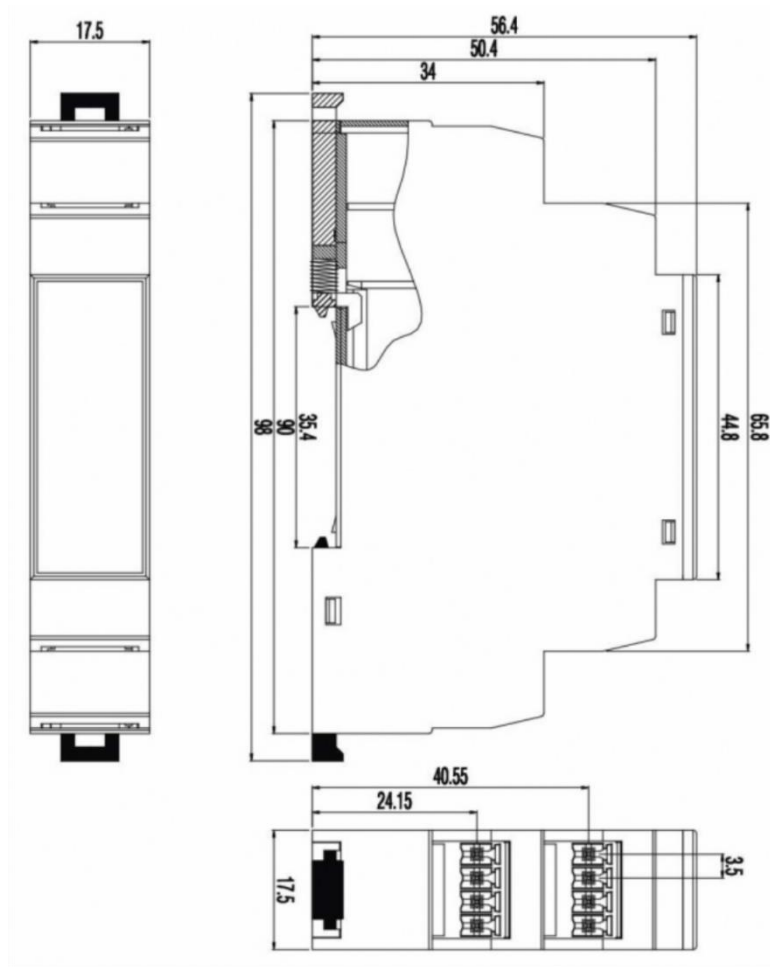


Fig. 3: Gateway dimension

1.4 Electrical installation

The device is intended to be used for installation into control cabinet in a DIN rail. After device installation, wires are connected to terminals.

Example for connection of stabilized DC supply voltage:

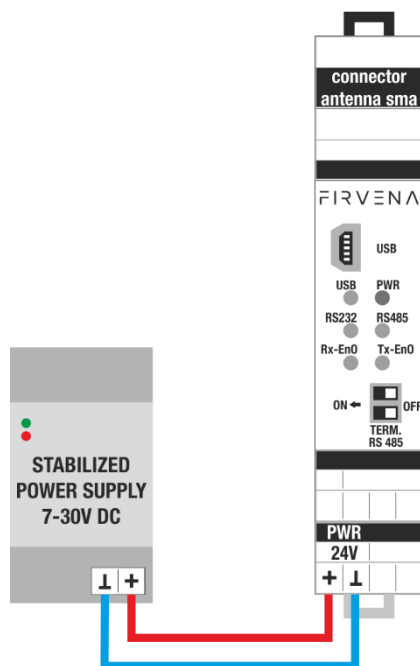


Fig. 4: Connection of stabilized DC supply voltage

Example for connection of communication through serial line RS 232:

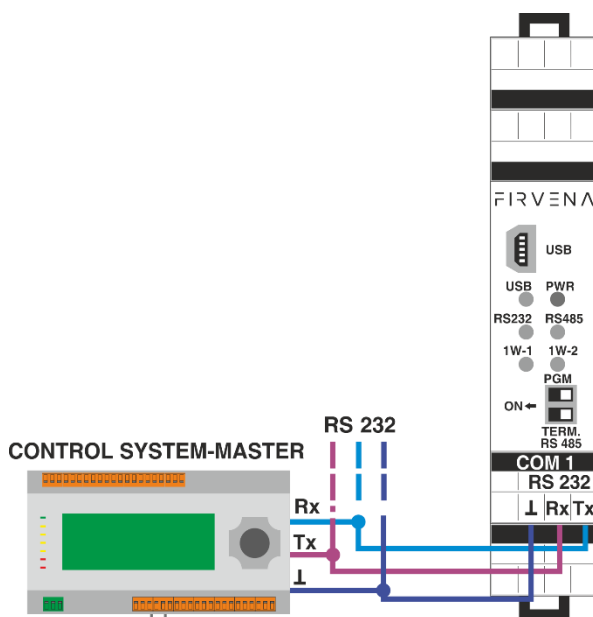


Fig. 5: Connection of communication through serial line RS 232

Example for connection of communication through serial line RS 485:

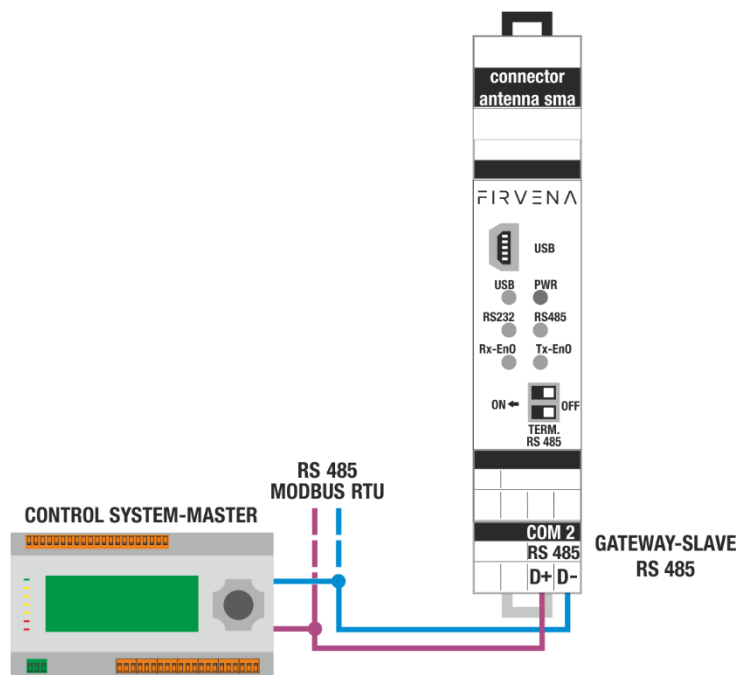


Fig. 6: Connection of communication through serial line RS 485

Example for connection of communication through USB interface:

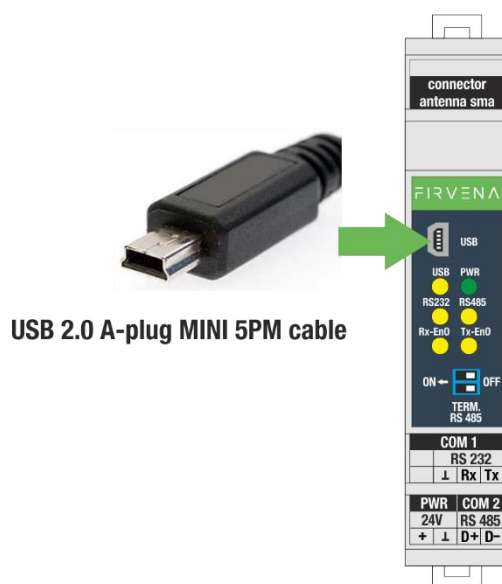


Fig. 7: Connection of communication through USB interface

2 RS 485 communication settings

Balance of idle state of the line RS 485 MODBUS RTU:

Communication serial line RS 485 MODBUS RTU in idle state, when no device transmits and all devices are to receive, the line is especially sensitive to induced voltage (faults) that may appear as incoming erroneous data.

For this reason, it is important to balance the idle state of the line by connection of appropriate resistors or terminators to one location on the line. It is implemented terminator in the device that is connected to the circuit with double DIP switch (see the Fig. 8). For long lines, we recommend to connect cable shield to GND.

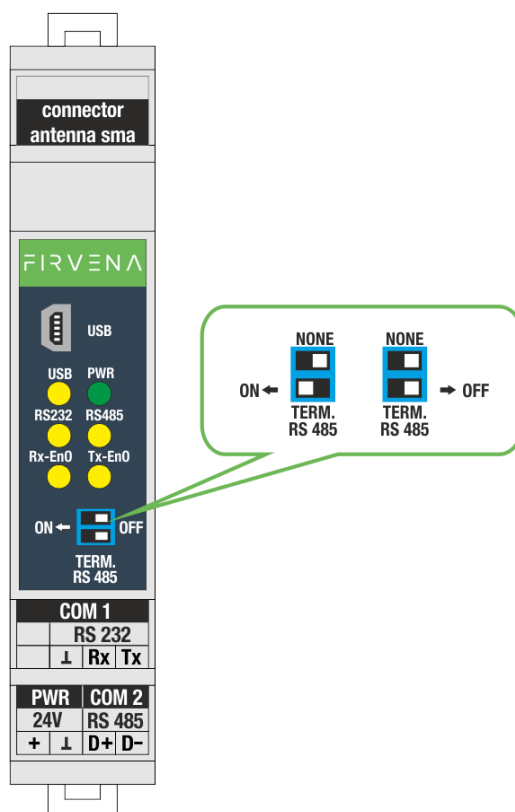


Fig. 8: Function of double DIP switch

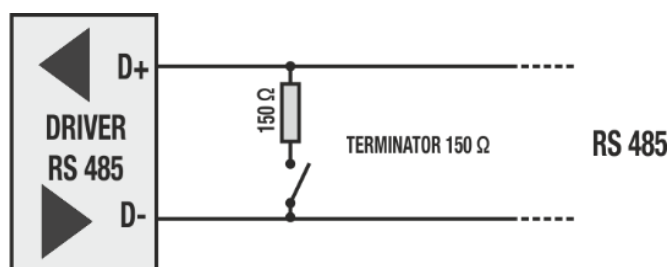


Fig. 9: Connection of terminator 150 Ω

3 MODBUS RTU communication description

Gateway receives data on frequency 868 MHz during its activity. It checks and process these data. Valid data are saved into prepared registers. These registers are readable by MODBUS RTU protocol.

3.1 Register map

There are a few registers assigned to each gateway in MODBUS RTU protocol.

Tab. 2: Register map

| Area | No | R/W | Description |
|-----------------|-------------|-----|---------------------------------|
| Rx data | 0 | R | Device 0 |
| | 10 | R | Device 1 |
| | 20 | R | Device 2 |
| | ... | | |
| | 399 | | Device 39 |
| ID | 400 | R/W | Device 0 |
| | 410 | R/W | Device 1 |
| | 420 | R/W | Device 2 |
| | ... | | |
| | 799 | R/W | Device 39 |
| | ... | | |
| Actual data | 900 | R | The currently received telegram |
| | ... | | |
| Service data | 1000 - 1054 | R/W | Gateway |
| | ... | | |
| Rx RAW data | 2000 | R/W | Device 0 |
| | 2010 | R/W | Device 1 |
| | 2020 | R/W | Device 2 |
| | ... | | |
| | 2399 | R/W | Device 39 |
| | ... | | |
| Rx Pressac data | 3000 | R/W | Device 0 |
| | 3010 | R/W | Device 1 |
| | 3020 | R/W | Device 2 |
| | ... | | |
| | 3399 | R/W | Device 39 |
| | ... | | |
| Tx data | 5000 | R/W | Device 0 |
| | 5030 | R/W | Device 1 |
| | 5060 | R/W | Device 2 |
| | ... | | |
| | 6199 | R/W | Device 39 |
| | ... | | |

3.1.1 Register map – data

Each device has 10 registers in which measured and converted values of supported sensors are saved, then there are saved information about signal strength, number of received telegrams, time from the last receiving, and indication of error.

Values are converted according to assigned RORG.

These include for example: measured values of temperature, humidity, CO2, state of contact, etc.

Value 1 – Value 6:

It shows measured and converted values of the sensor, size of supply voltage, permission or prohibition of sensor use, etc.

Signal strength:

The receiver measures signal strength during receiving of messages and it adds this value to the message. Then it is possible to find out how much is the signal from different transmitters damped. This value is dependent on distance, number of barriers, etc. Information about quality of received signal is very useful for change of receiver or transmitters position or for antenna selection.

Time from the last receiving:

The gateway counts time from the last received message for each position. It is possible to find out from this information for example, how outdated the temperature data are and if sensor did not stop to transmit. In case of use more receivers that receive the same transmitters, these data are decisive for selection of valid value. The value is in seconds.

Tab. 3: Register map - data

| | No | R/W | Description |
|----------|----|-----|------------------------------|
| Device 0 | 0 | R | Value 1 |
| | 1 | R | Value 2 |
| | 2 | R | Value 3 |
| | 3 | R | Value 4 |
| | 4 | R | Value 5 |
| | 5 | R | Value 6 |
| | 6 | R | Signal strength |
| | 7 | R | Number of received telegrams |
| | 8 | R | Time from the last receiving |
| | 9 | R | Error |
| Device 1 | 10 | R | Value 1 |
| | 11 | R | Value 2 |
| | 12 | R | Value 3 |
| | 13 | R | Value 4 |
| | 14 | R | Value 5 |
| | 15 | R | Value 6 |
| | 16 | R | Signal strength |
| | 17 | R | Number of received telegrams |
| | 18 | R | Time from the last receiving |
| | 19 | R | Error |

| | | | |
|-----------|-----|---|------------------------------|
| | ... | | |
| Device 39 | 390 | R | Value 1 |
| | 391 | R | Value 2 |
| | 392 | R | Value 3 |
| | 393 | R | Value 4 |
| | 394 | R | Value 5 |
| | 395 | R | Value 6 |
| | 396 | R | Signal strength |
| | 397 | R | Number of received telegrams |
| | 398 | R | Time from the last receiving |
| | 399 | R | Error |

Tab. 4: Register map – error register

| Error register | |
|----------------|--|
| Value | Meaning of value |
| 0 | Message Ok |
| 3 | The type of sensor is not supported |
| 7 | Timeout (10 minutes without received data) (it hasn't worked for the time being) |
| 255 | The position is not occupied |

3.1.2 Register map – ID data

The identification data determine which type of device it is. Identification data are saved in fields with ten registers for each device. These ID data start with the address 400. It is possible to edit them separately with function F-06 or collectively with function F-16.

It is possible to set RORG for values: 0xF6, 0xD5, 0xD2, 0xD1, 0xA6, 0xC6.

If different value is selected for RORG, the value doesn't display neither for FUNC nor TYPE.

ID0 – ID3:

It determines serial number of connected device.

RORG:

It determines type of supported EnOcean protocol (e.g.: RPS, 1BS, 4BS. VLD).

FUNC:

It determines function of the device (e.g.: temperature sensor, humidity sensor, gas sensor, light sensor, motion sensor, switching contacts, switches, etc.).

TYPE:

It determines type of device (e.g.: gas sensor – CO₂, Radon, temperature sensor – from 0 to +40 °C, from -20 to +60 °C, etc.).

Tab. 5: Register map – ID data

| | No | R/W | Description |
|-----------|-----|-----|-------------|
| Device 0 | 400 | R | ID0 |
| | 401 | R | ID1 |
| | 402 | R | ID2 |
| | 403 | R | ID3 |
| | 404 | R | RORG |
| | 405 | R | FUNC |
| | 406 | R | TYPE |
| | 407 | R | |
| | 408 | R | |
| | 409 | R | |
| Device 1 | 410 | R | ID0 |
| | 411 | R | ID1 |
| | 412 | R | ID2 |
| | 413 | R | ID3 |
| | 414 | R | RORG |
| | 415 | R | FUNC |
| | 416 | R | TYPE |
| | 417 | R | |
| | 418 | R | |
| | 419 | R | |
| | ... | | |
| Device 39 | 790 | R | ID0 |
| | 791 | R | ID1 |
| | 792 | R | ID2 |
| | 793 | R | ID3 |
| | 794 | R | RORG |
| | 795 | R | FUNC |
| | 796 | R | TYPE |
| | 797 | R | |
| | 798 | R | |
| | 799 | R | |

3.1.3 Register map – current changes

To monitor currently received messages quickly, data about currently received messages are reserved in register fields.

Registers with the address from 900 to 920 contain currently received message.

The stack is available for forty currently received messages.

After reading of register with the number 901 (sending a block with this address), the message is deleted and newer messages will appear at this position.

Tab. 6: Register map – current changes

| | No | R/W | Description | |
|---------------------|-----|-----|--|------------------------------|
| Actual rx data | 900 | R | Device number (0-39) (00FF – all new messages are read) | Value |
| | 901 | R | Value 1 | |
| | 902 | R | Value 2 | |
| | 903 | R | Value 3 | |
| | 904 | R | Value 4 | |
| | 905 | R | Value 5 | |
| | 906 | R | Value 6 | |
| | 907 | R | Signal strength | |
| | 908 | R | Number of received telegrams | |
| | 909 | R | Time from the last receiving | |
| | 910 | R | Error | ID |
| | 911 | R | ID0 | |
| | 912 | R | ID1 | |
| | 913 | R | ID2 | |
| | 914 | R | ID3 | |
| | 915 | R | RORG | |
| | 916 | R | FUNC | |
| | 917 | R | TYPE | |
| | 918 | R | Number of messages in the stack 0 - 40 | State |
| | 919 | R | Time x 10 ms (time from receiving this message in tens ms – max. 600 s) | |
| | 920 | R | The stack is over-fulled (1), if not (0) | |
| | 921 | R | Message serial number | |
| | ... | | | RAW |
| | 930 | R | RAW data 0 | |
| | 931 | R | RAW data 1 | |
| | 932 | R | RAW data 2 | |
| | 933 | R | RAW data 3 | |
| | 934 | R | RAW data 4 | |
| | 935 | R | RAW data 5 | |
| | 936 | R | RAW data 6 | |
| | 937 | R | RAW data 7 | |
| | 938 | R | RAW data 8 | |
| | 939 | R | RAW data 9 | |
| | ... | | | |
| | ... | | | |
| | 945 | R | Number of channel where the setting was actually changed (0xFF – no channel) | |
| | ... | | | |
| | ... | | | |
| Data from data area | 949 | R | Index – during each reading it is changes by one (it refers to data field) | RxData from register 0...399 |
| | 950 | R | Value 1 | |
| | 951 | R | Value 2 | |
| | 952 | R | Value 3 | |
| | 953 | R | Value 4 | |
| | 954 | R | Value 5 | |
| | 955 | R | Value 6 | |
| | 956 | R | Signal strength | |
| | 957 | R | Number of received telegrams | |
| | 958 | R | Time from the last receiving | |
| | 959 | R | Error | |

| | | | |
|----------------|-----|---|--|
| Actual Tx data | 960 | R | Device number (0-39) (00FF – all new messages are read) |
| | 961 | R | Source ID0 |
| | 962 | R | Source ID1 |
| | 963 | R | Source ID2 |
| | 964 | R | Source ID3 |
| | 965 | R | Dest. ID0 |
| | 966 | R | Dest. ID1 |
| | 967 | R | Dest. ID2 |
| | 968 | R | Dest. ID3 |
| | 969 | R | RORG |
| | 970 | R | FUNC |
| | 971 | R | TYPE |
| | 972 | R | VALUE1 |
| | 973 | R | VALUE2 |
| | 974 | R | VALUE3 |
| | 975 | R | VALUE4 |
| | 976 | R | VALUE5 |
| | 977 | R | VALUE6 |
| | 978 | R | VALUE7 |
| | 979 | R | Learn |
| | 980 | R | Number of messages in the stack 0 - 40 |
| | 981 | R | Time x 10 ms (time from transmitting this message in tens ms – max. 600 s) |
| | 982 | R | Message serial number |

3.1.4 Register map – service data

The gateway state is indicated in service registers. The field of service registers starts at the address 1000.

Tab. 7: Register map – service data

| Service registers | No | R/W | Description | |
|-------------------|------|----------------------------|--|-------|
| | 1000 | R | SW Version | |
| | 1001 | R | MODBUS address 1 ... 247 | COM0 |
| | 1002 | R | Baud rate (default 9600 Bd) | RS485 |
| | 1003 | R | MODBUS address 1 ... 247 | COM0 |
| | 1004 | R | Baud rate (default 9600 Bd) | RS485 |
| | 1005 | R | Stopbit 1, 2 | COM1 |
| | 1006 | R | Parity 0 – none, 1 – ODD, 2 - EVEN | RS232 |
| | 1007 | R | Stopbit 1, 2 | |
| | 1008 | R | Parity 0 – none, 1 – ODD, 2 - EVEN | |
| | 1009 | R | HW version | |
| | 1010 | R/W | Command | |
| | 1011 | R | Status | |
| | 1012 | R | (Teach-in) ID 0 | |
| | 1013 | R | (Teach-in) ID 1 | |
| | 1014 | R | (Teach-in) ID 2 | |
| | 1015 | R | (Teach-in) ID 3 | |
| | 1016 | R | (Teach-in) RORG | |
| | 1017 | R | (Teach-in) FUNC – if it is in TEACH -IN supported differently 9999 | |
| | 1018 | R | (Teach-in) TYPE – if it is in TEACH -IN supported differently 9999 | |
| | 1019 | R | (Teach-in) Manufacture ID | |
| 1020 | R | (Teach-in) signal strength | | |

| | | | |
|------|-----|--|------------|
| 1021 | R | (Teach-in) ID counter identical with the previous one (0-65000) 0-new device, after reading this register, number 1 is set | |
| 1022 | | | |
| 1023 | | | |
| 1024 | R | Transceiver ID0 | |
| 1025 | R | Transceiver ID1 | |
| 1026 | R | Transceiver ID2 | |
| 1027 | R | Transceiver ID3 | |
| 1028 | R | Transceiver version APP | |
| 1029 | R | Transceiver version API | |
| 1030 | | Number of received messages | PORT RS485 |
| 1031 | | Number of sent messages | |
| 1032 | | Number of error messages | |
| 1040 | | Number of received messages | PORT RS232 |
| 1041 | | Number of sent messages | |
| 1042 | | Number of error messages | |
| 1050 | | Number of received messages | PORT USB |
| 1051 | | Number of sent messages | |
| 1052 | | Number of error messages | |
| 1053 | R/W | Added delay between received message and reply 0 – 200ms | PORT RS485 |
| 1054 | R/W | Added delay between received message and reply 0 – 200ms | PORT RS232 |
| 1060 | R/W | Repeater: 0-OFF 1-ON for unrepeatable messages 2-ON for repeatable messages | |
| 1061 | R/W | 1 – Learning mode (60s) | |
| 1065 | R/W | 1 - CRC ON (default) 0 – CRC OFF (MODBUS messages – for tuning) | |

Tab. 8: Register map – service data – address 1010

| Address 1010 - COMMAND | |
|------------------------|---|
| Value | Meaning of value |
| 0x0F00 | It deletes receiving channel on position 0 (0x0F01 – position 1 ... 0x0F27 – position 39) |
| 0x1F00 | It deletes transmitting channel on position 0 (0x1F01 – position 1 ... 0x1F3B – position 59) |
| 0x0900 | It saves new sensor on position 0 (0x0901 – position 1 ... 0x0927 – position 39) |
| 0x11AA | SW Reset of the entire device |

Tab. 9: Register map – service data – address 1011

| Address 1011 – Status | |
|-----------------------|--|
| Value | Meaning of value |
| 0x1100 | Start without programming |
| 0x1101 | Start – new program has error CRC |
| 0x1102 | Start – new program is the same as the current one |
| 0x1103 | Start reprogramming was successful |
| 0xFFFF | Command was executed successfully |
| 0xEEE1 | Unknown position |
| 0xEEE2 | Unknown command |

Repeater

It is possible to set the gateway with the register 1060 as repeater. It manages to forward values in two levels in the net.

Option to activate one and two-level repeater for EnOcean radio telegrams:

Level 1 – If a received telegram is valid and original (not yet repeated), the telegram is repeated with a random delay. This delay will be chosen such a way, that the maximum TX validity time (as standardized in ISO 14543-3-10) will not exceed 40 ms.

Level 2 – If a received telegram is valid and original or repeated once, the telegram is repeated with a random delay. The limit is only in message validation, because each telegram can be resent only three times. This delay is chosen in such a way, that the maximum validity time (as standardized in ISO 14543-3-10) will not exceed 40 ms.

3.1.5 Register map – RAW data

At the address 2000 received data are displayed in raw state, how they were received.

The user converts the values then according to his needs.

Copies of received data are stored in registers with addresses from 2000 to 2399. Ten registers are prepared for each entry. First four registers contain ID number for easier orientation. Then there are types of telegrams and received data.

Tab. 10: Register map – RAW data

| | No | R/W | Description |
|---------------------|------|-----|-------------------|
| Device 0 (4BS) | 2000 | R | ID 0 |
| | 2001 | R | ID 1 |
| | 2002 | R | ID 2 |
| | 2003 | R | ID 3 |
| | 2004 | R | RORG =0xA5 |
| | 2005 | R | DB 0 |
| | 2006 | R | DB 1 |
| | 2007 | R | DB 2 |
| | 2008 | R | DB 3 |
| | 2009 | R | Status |
| Device 1 (RPS, 1BS) | 2010 | R | ID 0 |
| | 2011 | R | ID 1 |
| | 2012 | R | ID 2 |
| | 2013 | R | ID 3 |
| | 2014 | R | RORG =0xF6 (0xD5) |
| | 2015 | R | DB 0 |
| | 2016 | R | DB 1 |
| | 2017 | R | DB 2 |
| | 2018 | R | DB 3 |
| | 2019 | R | Status |
| | ... | | |

| | | | |
|-----------------|------|---|----------------------------|
| Device 39 (VLD) | 2390 | R | Hi byte ID 1, Lo Byte ID 0 |
| | 2391 | R | Hi byte ID 3, Lo Byte ID 2 |
| | 2392 | R | RORG = 0xD2 (0xD4) |
| | 2393 | R | Hi DB1; Lo DB0 |
| | 2394 | R | Hi DB3; Lo DB2 |
| | 2395 | R | Hi DB5; Lo DB4 |
| | 2396 | R | Hi DB7; Lo DB6 |
| | 2397 | R | Hi DB9; Lo DB8 |
| | 2398 | R | Hi DB11; Lo DB10 |
| | 2399 | R | Hi DB13; Lo DB12 |

3.1.6 Register map – Pressac

User registers for the company Pressac Communications Ltd.

User registers for measuring electric current with CT clamp are ready at the address 3000.

Tab. 11: Register map – Pressac

| | No | R/W | Description |
|-----------|------|-----|--|
| Device 0 | 3000 | R | ID 3 Hi , ID2 Lo |
| | 3001 | R | ID 1 Hi , ID0 Lo |
| | 3002 | R | Telegram type (0,1,2) |
| | 3003 | R | Power fail (1,0) |
| | 3004 | R | Divisor (1,0) |
| | 3005 | R | 0 (reserved) |
| | 3006 | R | Value 1 (Type 0, Type 1, Type 2) |
| | 3007 | R | Value 2 (Type 1, Type 2) (0xFFFF for Type 0) |
| | 3008 | R | Value 3 (Type 2) (0xFFFF for Type 0, Type1) |
| | 3009 | R | Reserved (0xFFFF for Type 0, Type1) (0 for Type 2) |
| Device 1 | 3010 | R | ID 3 Hi , ID2 Lo |
| | 3011 | R | ID 1 Hi , ID0 Lo |
| | 3012 | R | Telegram type (0,1,2) |
| | 3013 | R | Power fail (1,0) |
| | 3014 | R | Divisor (1,0) |
| | 3015 | R | 0 (reserved) |
| | 3016 | R | Value 1 (Type 0, Type 1, Type 2) |
| | 3017 | R | Value 2 (Type 1, Type 2) (0xFFFF for Type 0) |
| | 3018 | R | Value 3 (Type 2) (0xFFFF for Type 0, Type1) |
| | 3019 | R | Reserved (0xFFFF for Type 0, Type1) (0 for Type 2) |
| | ... | | |
| Device 39 | 3390 | R | ID 3 Hi , ID2 Lo |
| | 3391 | R | ID 1 Hi , ID0 Lo |
| | 3392 | R | Telegram type (0,1,2) |
| | 3393 | R | Power fail (1,0) |
| | 3394 | R | Divisor (1,0) |
| | 3395 | R | 0 (reserved) |
| | 3396 | R | Value 1 (Type 0, Type 1, Type 2) |
| | 3397 | R | Value 2 (Type 1, Type 2) (0xFFFF for Type 0) |
| | 3398 | R | Value 3 (Type 2) (0xFFFF for Type 0, Type1) |
| | 3399 | R | Reserved (0xFFFF for Type 0, Type1) (0 for Type 2) |

3.1.7 Register map – TX

- Register map for transmitting preselected telegrams start at address 5000.
- It is possible to transmit up to 40 preset telegrams.
- 20 registers are reserved for each command.
- As Source ID it is possible to use ID of transmitter (registers 1022 – 1026)
- As Source ID it is possible to use BASE ID (0xFF, 0x01...0x28)

The transmitting is available on 40 channels. It is not about frequency, the frequency is always the same, it is about virtual transmitters with different ID number. ID numbers of transmitters are in the range FF-FF-FF- (01H ... 28H). The EnOcean transmitter supports such a format of ID numbers. Virtual ID number are not completely unique and it is necessary to pay attention not to cover in case of use of more transmitters.

ID3 = 255, ID2 = 255 dec, ID1 = 255 dec, ID0 = 1..40 dec

If value 0xFF is added to transmitting register source ID0, the gateway will add default ID, that was added from the production to transmitting module, automatically during approximately half a minute.

Tab. 12: Register map – Tx

| | No | R/W | Description |
|-------------------------|------|-----|--|
| Transmitting telegram 0 | 5000 | R/W | Source ID0 |
| | 5001 | R/W | Source ID1 |
| | 5002 | R/W | Source ID2 |
| | 5003 | R/W | Source ID3 |
| | 5004 | R/W | Dest. ID0 |
| | 5005 | R/W | Dest. ID1 |
| | 5006 | R/W | Dest. ID2 |
| | 5007 | R/W | Dest. ID3 |
| | 5008 | R/W | RORG |
| | 5009 | R/W | FUNC |
| | 5010 | R/W | TYPE |
| | 5011 | R/W | VALUE1 |
| | 5012 | R/W | VALUE2 |
| | 5013 | R/W | VALUE3 |
| | 5014 | R/W | VALUE4 |
| | 5015 | R/W | VALUE5 |
| | 5016 | R/W | VALUE6 |
| | 5017 | R/W | VALUE7 |
| | 5018 | R/W | Learn button |
| | 5019 | W | Sending 1 - Immediately 2 – For receiving message 1x (must be filled in Destination ID) 3 – For receiving message always (must be filled in Destination ID) 101 – This immediately and next message in sequence in 100ms 102 – This immediately and next message in sequence in 150ms 103 – This immediately and next message in sequence in 200ms 104 – This immediately and next message in sequence in 250ms 105 – This immediately and next message in sequence in 300ms 106 – This immediately and next message in sequence in 350ms 107 – This immediately and next message in sequence in 400ms 108 – This immediately and next message in sequence in 450ms |

| | | | |
|-------------------------|------|-----|--|
| | | | 109 – This immediately and next message in sequence in 500ms 110 – This immediately and next message in sequence in 550ms 111 – This immediately and next message in sequence in 600ms |
| Transmitting telegram 1 | 5020 | R/W | Source ID0 |
| | 5021 | R/W | Source ID1 |
| | 5022 | R/W | Source ID2 |
| | 5023 | R/W | Source ID3 |
| | 5024 | R/W | Dest. ID0 |
| | 5025 | R/W | Dest. ID1 |
| | 5026 | R/W | Dest. ID2 |
| | 5027 | R/W | Dest. ID3 |
| | 5028 | R/W | RORG |
| | 5029 | R/W | FUNC |
| | 5030 | R/W | TYPE |
| | 5031 | R/W | VALUE1 |
| | 5032 | R/W | VALUE2 |
| | 5033 | R/W | VALUE3 |
| | 5034 | R/W | VALUE4 |
| | 5035 | R/W | VALUE5 |
| | 5036 | R/W | VALUE6 |
| | 5037 | R/W | VALUE7 |
| | 5038 | R/W | Learn button |
| | 5039 | W | Sending 1 - Immediately 2 – For receiving message 1x (must be filled in Destination ID) 3 – For receiving message always (must be filled in Destination ID) 101 – This immediately and next message in sequence in 100ms 102 – This immediately and next message in sequence in 150ms 103 – This immediately and next message in sequence in 200ms 104 – This immediately and next message in sequence in 250ms 105 – This immediately and next message in sequence in 300ms 106 – This immediately and next message in sequence in 350ms 107 – This immediately and next message in sequence in 400ms 108 – This immediately and next message in sequence in 450ms 109 – This immediately and next message in sequence in 500ms 110 – This immediately and next message in sequence in 550ms 111 – This immediately and next message in sequence in 600ms |

4 Supported functions

It is possible to communicate with gateway in the net MODBUS RTU with following functions:

- Function 3 enables to read any registers in its memory range. Available registers return zero.
- Function 6 sets values in (adjustable) registers. It is used to set transmitted message and for its sending.
- Function 16 is used only for writing new ID number into gateway's memory.

5 Software tool EnOcean Tools

The tool is prepared for simple administration of all elements serviced with gateway through you can connect or disconnect EnOcean elements to and from gateway, monitor their states, values, communication intervals and signal strength. Another useful function is the possibility to control EnOcean elements from the gateway side. When there are installed more gateways, the tool enables to monitor and compare on which gateway each element has better signal and to assign the element with better signal to its gateway. You can assign the elements on position with use of ID number manually or automatically. The type of communication (RS 232, RS 485, USB) and baud rate can be set with this software. The baud rate for USB is default 115,2 kBd.

6 Supported profiles of device (EEP) for receiving data

6.1 Supported 4BS telegrams

| A5-02-xx Temperature sensors | | |
|------------------------------|----------|------------------------------------|
| EEP | Registry | Popis |
| A5-02-01 | Value1 | Temperature -40 ... 0 °C (x10) |
| A5-02-02 | Value1 | Temperature -30 ... +10 °C (x10) |
| A5-02-03 | Value1 | Temperature -20 ... +20 °C (x10) |
| A5-02-04 | Value1 | Temperature -10 ... +30 °C (x10) |
| A5-02-05 | Value1 | Temperature 0 ... +40 °C (x10) |
| A5-02-06 | Value1 | Temperature +10 ... +50 °C (x10) |
| A5-02-07 | Value1 | Temperature +20 ... +60 °C (x10) |
| A5-02-08 | Value1 | Temperature +30 ... +70 °C (x10) |
| A5-02-09 | Value1 | Temperature +40 ... +80 °C (x10) |
| A5-02-0A | Value1 | Temperature +50 ... +90 °C (x10) |
| A5-02-0B | Value1 | Temperature +60 ... +100 °C (x10) |
| A5-02-10 | Value1 | Temperature -60 ... +20 °C (x10) |
| A5-02-11 | Value1 | Temperature -50 ... +30 °C (x10) |
| A5-02-12 | Value1 | Temperature -40 ... +40 °C (x10) |
| A5-02-13 | Value1 | Temperature -30 ... +50 °C (x10) |
| A5-02-14 | Value1 | Temperature -20 ... +60 °C (x10) |
| A5-02-15 | Value1 | Temperature -10 ... +70 °C (x10) |
| A5-02-16 | Value1 | Temperature 0 ... +80 °C (x10) |
| A5-02-17 | Value1 | Temperature +10 ... +90 °C (x10) |
| A5-02-18 | Value1 | Temperature +20 ... +100 °C (x10) |
| A5-02-19 | Value1 | Temperature +30 ... +110 °C (x10) |
| A5-02-1A | Value1 | Temperature +40 ... +120 °C (x10) |
| A5-02-1B | Value1 | Temperature +50 ... +130 °C (x10) |
| A5-02-20 | Value1 | Temperature -10 ... +41,2 °C (x10) |
| A5-02-30 | Value1 | Temperature -40 ... +62,3 °C (x10) |

A5-04-xx Temperature and humidity sensors

| EEP | Registers | Description |
|----------|-----------|---|
| A5-04-01 | Value1 | Temperature 0 ... +40 °C (x10) |
| | Value2 | Relative humidity 0 ... 100 % (x10) |
| | Value3 | Temperature sensor: 1 - available 0 - not available |
| A5-04-02 | Value1 | Temperature -20 ... +60 °C (x10) |
| | Value2 | Relative humidity 0 ... 100 % (x10) |
| | Value3 | Temperature sensor: 1 - available 0 - not available |
| A5-04-03 | Value1 | Temperature -20 ... +60 °C (x10) - resolution 10bit |
| | Value2 | Relative humidity 0 ... 100 % (x10) |
| | Value3 | Telegram type: 1 – Event triggered 0 - heartbeat |

A5-05-xx Pressure sensors

| EEP | Registers | Description |
|----------|-----------|---|
| A5-05-01 | Value1 | Pressure 500 ... 1150 hPa |
| | Value2 | Telegram type: 1 – Event triggered 0 - heartbeat |
| | Value3 | Temperature sensor: 1 - available 0 - not available |

A5-06-xx Light sensors

| EEP | Registers | Description |
|----------|-----------|---|
| A5-06-01 | Value1 | Supply voltage 0... 5.0V (x100) |
| | Value2 | Illumination 300-60000lx (/10) value 300-6000 |
| | Value3 | Range |
| A5-06-02 | Value1 | Supply voltage 0... 5.0V (x100) |
| | Value2 | Illumination 0-1020lx |
| | Value3 | Range |
| A5-06-03 | Value1 | Supply voltage 0... 5.0V (x100) |
| | Value2 | Illumination 0-1000lx |
| A5-06-04 | Value1 | Temperature -20°C ... 60°C |
| | Value2 | Illumination 0-65535lx (/10) value 0-6553 |
| | Value3 | Energy storage 0...100% |
| | Value4 | Valid temperature data 0 ... 1 |
| | Value5 | Valid storage data 0 ... 1 |

| A5-07-xx PIR sensors | | |
|----------------------|-----------|---|
| EEP | Registers | Description |
| A5-07-01 | Value1 | 0 - PIR off ... 1 – PIR on |
| | Value2 | Supply voltage 0... 5.0V (x10) |
| | Value3 | Supply voltage availability : 0 – Supply voltage is not supported 1- Supply voltage is supported |
| A5-07-02 | Value1 | 0 – Uncertain of occupancy status ... 1 – Motion detect |
| | Value2 | Supply voltage 0... 5.0 V (x10) |
| A5-07-03 | Value1 | 0 - PIR off ... 1 – PIR on |
| | Value2 | Supply voltage 0... 5.0 V (x10) |
| | Value3 | Illumination 0...1000 lx |
| A5-08-01 | Value1 | 0 - PIR off ... 1 – PIR on |
| | Value2 | Supply voltage 0... 5.1 V (x10) |
| | Value3 | Button occupancy 1 – preset 0- released |
| | Value4 | Illumination 0 ... 510 lx |
| | Value5 | Temperature 0 ... 51 °C (x10) |
| A5-08-02 | Value1 | 0 - PIR off ... 1 – PIR on |
| | Value2 | Supply voltage 0... 5.1 V (x10) |
| | Value3 | Button occupancy 1 – preset 0- released |
| | Value4 | Illumination 0 ... 1020 lx |
| | Value5 | Temperature 0 ... 51 °C (x10) |
| A5-08-03 | Value1 | 0 - PIR off ... 1 – PIR on |
| | Value2 | Supply voltage 0... 5.1 V (x10) |
| | Value3 | Button occupancy 1 – preset 0- released |
| | Value4 | Illumination 0 ... 1530 lx |
| | Value5 | Temperature -30 ... 50 °C (x10) |
| A5-09-02 | Value1 | CO conc. 0...1020ppm |
| | Value2 | Supply voltage 0... 5.1 V (x10) |
| | Value3 | Temperature 1...51°C (x10) |
| | Value6 | 0 - Temper. Sensor not available 1 – Temperature sensor available |
| A5-09-04 | Value1 | CO ₂ conc. 0...2550ppm increment = 10ppm |
| | Value2 | Relative Humidity 0...100% (x10) res. 0,5% |
| | Value3 | Temperature 1...51°C (x10) |
| | Value4 | |
| | Value5 | 0 - Humidity Sensor not available 1 – Humidity sensor available |
| | Value6 | 0 - Temper. Sensor not available 1 – Temperature sensor available |

| A5-09-xx Environmental sensors VOC, CO, CO ₂ , dust, radon | | |
|---|-----------|--|
| EEP | Registers | Description |
| A5-09-02 | Value1 | CO conc. 0...1020ppm |
| | Value2 | Supply voltage 0... 5.1 V (x10) |
| | Value3 | Temperature 1...51°C (x10) |
| | Value6 | 0 - Temper. Sensor not available 1 – Temperature sensor available |
| A5-09-04 | Value1 | CO ₂ conc. 0...2550ppm increment = 10ppm |
| | Value2 | Relative Humidity 0...100% (x10) res. 0,5% |
| | Value3 | Temperature 1...51°C (x10) |
| | Value4 | 0 |
| | Value5 | 0 - Humidity Sensor not available 1 – Humidity sensor available |
| | Value6 | 0 - Temper. Sensor not available 1 – Temperature sensor available |
| A5-09-05 | Value1 | VOC con. 0 ...65535 ppb |
| | Value2 | VOC ID 0: VOCT (total) 1: Formaldehyde 2: Benzene 3: Styrene 4: Toluene 5: Tetrachloroethylene 6: Xylene 7: n-Hexane 8: n-Octane 9: Cyclopentane 10: Methanol 11: Ethanol 12: 1 – Pentanol 13: Acetone 14: ethylene Oxide 15: Acetaldehyde ue 16: Acetic Acid 17: Propionice Acid 18: Valeric Acid 19: Butyric Acid 20: Ammoniac 22: Hydrogen Sulfide 23: Dimethylsulfide 24: 2 – Butanol (butyl Alcohol) 25: 2 – Methylpropanol 26: Diethyl ether 255: ozone |
| | Value3 | Scale Multiplier 0: 0.01 1: 0.1 2: 1 3: 10 |
| A5-09-06 | Value1 | Radon aktivty 0 ...1023 Bq/m ³ |
| A5-09-07 | Value 1 | Dust less than 10 µm (PM10) 0...511 0...511 µg/m ³ |
| | Value 2 | Dust less than 2.5 µm (PM2.5) 0...511 0...511 µg/m ³ |
| | Value 3 | Dust less than 1 µm (PM1) 0...511 0...511 µg/m ³ |
| | Value 4 | 0: PM10 not active 1: PM10 active |
| | Value 5 | 0: PM2.5 not active 1: PM2.5 active |
| | Value 6 | 0: PM1 not active 1: PM1 active |
| A5-09-08 | Value 1 | CO ₂ 0 – 2000 ppm (Pure sensor) |

| A5-10-xx Room Operating Panel | | | |
|-------------------------------|----------|---|---|
| EEP | Registry | Popis | |
| A5-10-01 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | Button occupancy 1 – preset 0- released | |
| | Value4 | Turn-switch for fan speed Enum: | 210...255: Stage Auto 190...209: Stage 0 165...189: Stage 1 145...164: Stage 2 0...144: Stage 3 |
| | Value5 | Stage 0,1,2,3, (255=AUTO) | |
| | Value6 | Reserved | |
| A5-10-02 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | Slide switch or Slide switch Day/Night 1 – day(sw1) 0- night(sw0) | |
| | Value4 | Turn-switch for fan speed Enum | 210...255: Stage Auto 190...209: Stage 0 165...189: Stage 1 145...164: Stage 2 0...144: Stage 3 |
| | Value5 | Stage 0,1,2,3, (255=AUTO) | |
| | Value6 | reserved | |
| A5-10-03 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | reserved | |
| | Value4 | reserved | |
| | Value5 | reserved | |
| | Value6 | reserved | |
| A5-10-04 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | reserved | |
| | Value4 | Turn-switch for fan speed Enum | 210...255: Stage Auto 190...209: Stage 0 165...189: Stage 1 145...164: Stage 2 0...144: Stage 3 |
| | Value5 | Stage 0,1,2,3, (255=AUTO) | |
| | Value6 | reserved | |
| A5-10-05 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | Button occupancy 1 – preset 0- released | |
| | Value4 | reserved | |
| | Value5 | reserved | |
| | Value6 | reserved | |
| A5-10-06 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | slide switch or Slide switch Day/Night | 0: Position I / Night /Off 1: Position O / Day /On |
| | Value4 | reserved | |
| | Value5 | reserved | |
| | Value6 | reserved | |

| A5-10-xx Room Operating Panel | | |
|-------------------------------|-----------|-------------|
| EEP | Registers | Description |

| | | | |
|----------|--------|---|---|
| A5-10-07 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | reserved | |
| | Value3 | reserved | |
| | Value4 | Turn-switch for fan speed Enum: | 210...255: Stage Auto 190...209: Stage 0 165...189: Stage 1 145...164: Stage 2 0...144: Stage 3 |
| | Value5 | Stage 0,1,2,3, (255=AUTO) | |
| | Value6 | reserved | |
| A5-10-08 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | reserved | |
| | Value3 | Button occupancy 1 – preset 0- released | |
| | Value4 | Turn-switch for fan speed Enum | 210...255: Stage Auto 190...209: Stage 0 165...189: Stage 1 145...164: Stage 2 0...144: Stage 3 |
| | Value5 | Stage 0,1,2,3, (255=AUTO) | |
| | Value6 | reserved | |
| A5-10-09 | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | reserved | |
| | Value3 | Slide switch or Slide switch Day/Night 1 – day(sw1) 0- night(sw0) | |
| | Value4 | Turn-switch for fan speed Enum | 210...255: Stage Auto 190...209: Stage 0 165...189: Stage 1 145...164: Stage 2 0...144: Stage 3 |
| | Value5 | Stage 0,1,2,3, (255=AUTO) | |
| | Value6 | reserved | |
| A5-10-0A | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | Contact state 0 – Close; 1- Open | |
| | Value4 | Reserved | |
| | Value5 | Reserved | |
| | Value6 | Reserved | |
| A5-10-0B | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Reserve | |
| | Value3 | Button occupancy 1 – preset 0- released | |
| | Value4 | reserved | |
| | Value5 | reserved | |
| | Value6 | reserved | |
| A5-10-0C | Value1 | Actual temperature 0...+40°C (x10) | |
| | Value2 | Setpoint 0-255 | |
| | Value3 | slide switch or Slide switch Day/Night | 0: Position I / Night /Off 1: Position O / Day /On |
| | Value4 | reserved | |
| | Value5 | reserved | |
| | Value6 | reserved | |

| A5-10-xx Room Operating Panel | | |
|-------------------------------|-----------|------------------------------------|
| EEP | Registers | Description |
| A5-10-10 | Value1 | Actual temperature 0...+40°C (x10) |
| | Value2 | Setpoint 0-255 |

| | | |
|----------|--------|---|
| | Value3 | Button occupancy 1 – preset 0- released |
| | Value4 | Humidity 0...100% |
| | Value5 | Reserved |
| | Value6 | Reserved |
| A5-10-11 | Value1 | Actual temperature 0...+40°C (x10) |
| | Value2 | Setpoint 0-255 |
| | Value3 | Slide switch or Slide switch Day/Night 1 – day(sw1) 0- night(sw0) |
| | Value4 | Humidity 0...100% |
| | Value5 | Reserved |
| | Value6 | Reserved |
| A5-10-12 | Value1 | Actual temperature 0...+40°C (x10) |
| | Value2 | Setpoint 0-255 |
| | Value3 | Reserved |
| | Value4 | Humidity 0...100% |
| | Value5 | Reserved |
| | Value6 | Reserved |
| A5-10-13 | Value1 | Actual temperature 0...+40°C (x10) |
| | Value2 | Reserved |
| | Value3 | Button occupancy 1 – preset 0- released |
| | Value4 | Humidity 0...100% |
| | Value5 | Reserved |
| | Value6 | Reserved |
| A5-10-14 | Value1 | Actual temperature 0...+40°C (x10) |
| | Value2 | Reserved |
| | Value3 | Button occupancy 1 – preset 0- released |
| | Value4 | Humidity 0...100% |
| | Value5 | Reserved |
| | Value6 | Reserved |
| A5-10-20 | Value1 | Actual temperature 0...+40°C (x10) |
| | Value2 | Setpoint 0...255 |
| | Value3 | Heating mode 0 , 1, 2, 3 Reserved |
| | Value4 | Battery change needed 1: battery low 0 :battery ok |
| | Value5 | Reserved |
| | Value6 | Reserved |

| A5-20-xx Actuators | | |
|--------------------|-----------|--|
| EEP | Registers | Description |
| A5-20-01 | Value1 | Actuator position 0...100 % |
| | Value2 | Actual temperature from actuator 0...+40°C (x10) |
| | Value3 | 1-Service on |
| | Value4 | 1-Detection Window open |
| | Value5 | 1 Energy input enabled (MVA004 Active energy harvesting (valve is hot)) 10 Energy storage (MVA004 - Energy storage sufficiently filled) |
| | Value6 | 1 Failure temperature sensor 10 Actuator obstructed (MVA004 motor failure) 100 Cover open 1000 Batery – change battery next day 1111 + Batery – change battery next day + Cover open + Actuator obstructed + Failure temperature sensor |
| A5-20-04 | Value1 | Actuator position 0...100 % |
| | Value2 | Room Temperature 10...30 °C |
| | Value3 | Feed Temperature 20 .. 80°C |
| | Value4 | Temperature Set Point 10 .. 30°C |

| | | | | |
|--|--------|------------------------------|---|--|
| | Value5 | Status byte 0000 ... 1111 | Failure Code Button Lock Status Measurement Status Status Request | 0xxx No failure 1xxx failure x0xx Unlocked x1xx Locked xx0x Inactive xx1x Active xxx0 No change xxx1 Status requested |
| | Value6 | Failure Code 0...255 | 0...16: Reserved 17: Measurement error 18: Battery empty 19: Reserved 20: Frost protection 21 ...32: Reserved 33: Blocked valve 34 ...35: Reserved 36: End point detection error 37 ...39: Reserved 40: No valve 41 ...48: Reserved 49: Not taught in 50 ... 52: Reserved 53: No response from controller 54: Teach-in error 55 ... 255: Reserved | |

6.2 Supported RPS telegrams

| F6-01-xx Switch | | |
|-----------------|-----------|---|
| EEP | Registers | Description |
| F6-01-01 | Value1 | 0: Button released 1: Button pressed |
| | Value2 | Last value |
| | Value3 | Previous value |
| | Value4 | Previous value |
| | Value5 | Energy Bow: 0 – released; 1- pressed; 2-long push |
| | Value6 | Number of incoming messages from the last reading of the value 1 (max. 3) |

| F6-02-xx Switch | | |
|-----------------|-----------|---|
| EEP | Registers | Description |
| F6-02-01 | Value1 | Rocker 1st action 1: Button A1: "Switch light on" or "Dim light down" or "Move blind closed" 3: Button A0: "Switch light off" or "Dim light up" or "Move blind open" 5: Button B1: "Switch light on" or "Dim light down" or "Move blind closed" 7: Button B0: "Switch light off" or "Dim light up" or "Move blind open" |
| | Value2 | Last value |
| | Value3 | Previous value |
| | Value4 | 2nd action |
| | Value5 | Energy Bow: 0 – released; 1- pressed; 2-long push |
| | Value6 | Number of incoming messages from the last reading of the value 1 (max. 3)) |
| F6-02-02 | Value1 | Rocker 1st action 1: Button A1: "Switch light on" or "Dim light up" or "Move blind open" 3: Button A0: "switch light off" or "Dim light down" or "Move blind closed" 5: Button B1: "Switch light on" or "Dim light up" or "Move blind open" 7: Button B0: "Switch light off" or "Dim light down" or "Move blind closed" |
| | Value2 | Last value |
| | Value3 | Previous value |
| | Value4 | 2nd action |
| | Value5 | Energy Bow: 0 – released; 1- pressed; 2-long push |
| | Value6 | Number of incoming messages from the last reading of the value 1 (max. 3) |
| F6-02-03 | Value1 | 0x30: Button A0: Set the controller in automatic mode 0x10: Button A1: Set the controller in manually mode and toggles between switch light on and switch light off 0x70: Button B0: Dim light up 0x50: Button B1: Dim light down |
| | Value2 | Last value |
| | Value3 | Previous value |
| | Value4 | 2Previous value |
| | Value5 | Energy Bow: 0 – released; 1- pressed; 2-long push |
| | Value6 | Number of incoming messages from the last reading of the value 1 (max. 5) |
| F6-02-04 | Value1 | 1: Button A0 pressed 2: |
| | Value2 | Last value |
| | Value3 | Previous value |
| | Value4 | 2Previous value |
| | Value5 | 3Previous value |
| | Value6 | Number of incoming messages from the last reading of the value 1 (max. 5) |

| F6-04-xx Position switch, Home and office Application | | |
|---|-----------|--|
| EEP | Registers | Description |
| F6-02-01 | Value1 | 1 = Card Inserted 0 = take out |
| | Value2 | Last value |
| | Value3-6 | 0 |
| F6-02-02 | Value1 | 1 = Card Inserted 0 = take out |
| | Value2 | Last value |
| | Value3 | Energy bow (1 = Card Inserted 0 = take out) |
| | Value4 | 0 |
| | Value5 | Button coding 0: button |
| | Value6 | 0 |

6.3 Supported 1BS telegrams

| D5-00-xx Switch | | |
|-----------------|-----------|---|
| EEP | Registers | Description |
| D5-00-01 | Value1 | 0: OPEN (without battey door/window kontakt) 1: CLOSE |
| | Value2 | Last value |
| | Value3 | Previous value |
| | Value4 | 2Previous value |
| | Value5 | 3Previous value |
| | Value6 | Number of incoming messages from the last reading of the value 1 (max. 5) |

6.4 Supported VLD telegrams

| D2-01-XX Actuators, Dimmers | | |
|-----------------------------|---------------|---|
| EEP | Registers | Description |
| <i>CMD = 0x01</i> | Value1 | CMD index = 1 |
| | Value 2 | Output value: 0: Output value 0% or OFF 1...100: Output value 1% to 100% or ON 101...126: Not used 127: Output value not valid / not applicable |
| | Value3 | Dim value: 0: Switch to new output value 1: Dim to new output value – dim timer 1 2: Dim to new output value – dim timer 2 3: Dim to new output value – dim timer 3 4: Stop dimming 5...7: not used |
| | Value4 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| <i>CMD = 0x04</i> | Value1 | CMD index = 4 Actuator status response |
| | Value2 | Output value: 0: Output value 0% or OFF 1...100: Output value 1% to 100% or ON 101...126: Not used 127: Output value not valid / not applicable |
| | Value3 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value4 | 0: Local control disabled / not supported 1: Local control enabled |
| | Value5 | 100 Power Failure Detection enabled 10 Power Failure Detected 1 Over current switch off: executed |
| | Value6 | Error level 0: Error level 0: hardware OK 1: Error level 1: hardware warning 2: Error level 2: hardware failure 3: Error level not supported |
| <i>CMD = 0x07</i> | Value1 | CMD index = 7 Actuator measurement response |
| | Value2 | Value – low 16 bytes |
| | Value3 | Value – high 16 bytes |
| | Value4 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value5 | Unit 0: Energy [Ws] 1: Energy [Wh] 2: Energy [KWh] 3: Power [W] 4: Power [KW] 5... 7: Not used |

| D2-03-XX | | |
|----------|----------|---|
| | Registry | Popis |
| D2-03-00 | Value1 | 0-4 ... Reserved 5 ... Button A1 + B0 pressed, energy bow pressed 6 ... 3 or 4 buttons pressed, energy bow pressed 7 ... Button A0 + B0 pressed, energy bow pressed 8 ... No buttons pressed, energy bow pressed 9 ... Button A1 + B1 pressed, energy bow pressed 10 ... Button A0 + B1 pressed, energy bow pressed 11 ... Button B1 pressed, energy bow pressed 12 ... Button B0 pressed, energy bow pressed 13 ... Button A1 pressed, energy bow pressed 14 ... Button A0 pressed, energy bow pressed 15 ... Energy bow released |
| D2-03-0A | Value1 | Button Action 1 ... Simple Press 2 ... Double Press 3 ... Long Press 4 ... Long Press released |
| | Value2 | Battery Autonomy 0 ... 100% |
| D2-03-10 | Value1 | Movement of the window handle 1 ... 0b00000001 2 ... 0b00000010 4 ... 0b00000011 5 ... 0b00000100 |

| D2-05-XX Blinds Control for Position and Angle | | |
|--|-----------|---|
| EEP | Registers | Description |
| D2-05-00 | | (D2-05-01) |
| CMD = 0x04 | Value1 | CMD index = 4 Reply Position and Angle |
| | Value2 | Channel address Channel 1 |
| | Value3 | Current vertical position 0...100: 0...100 % 127: Position unknown, will be known after the next goto cmd |
| | Value4 | Current rotation angle 0...100: 0...100 % 127: Angle unknown, will be known after the next goto cmd |
| | Value5 | Current locking mode 0: Normal (no lock) 1: Blockage mode 2: Alarm mode 3 ... 7:Reserved |
| | Value6 | 0 |

| D2-32-XX Current sensors | | |
|--------------------------|-----------|---|
| EEP | Registers | Description |
| D2-32-00 | Value1 | Input 1 0 ... 4095 0 ... 409,5 A (without battery current sensor - clamp) |
| | Value2 | 0 |
| | Value3 | 0 |

| | | |
|-----------------|--------|---|
| | Value4 | 0 |
| | Value5 | 0 ...1 Divisor |
| | Value6 | 0 ... 1 Power Fail |
| D2-32-01 | Value1 | Input 1 0 ... 4095 0 ... 409,5 A (without battery current sensor - clamp) |
| | Value2 | Input 2 0 ... 4095 0 ... 409,5 A (without battery current sensor - clamp) |
| | Value3 | 0 |
| | Value4 | 0 |
| | Value5 | 0 ...1 Divisor |
| | Value6 | 0 ... 1 Power Fail |
| D2-32-02 | Value1 | Input 1 0 ... 4095 0 ... 409,5 A (without battery current sensor - clamp) |
| | Value2 | Input 2 0 ... 4095 0 ... 409,5 A (without battery current sensor - clamp) |
| | Value3 | Input 3 0 ... 4095 0 ... 409,5 A (without battery current sensor - clamp) |
| | Value4 | 0 |
| | Value5 | 0 ...1 Divisor |
| | Value6 | 0 ... 1 Power Fail |
| D2-20-12 | | |
| | | |

6.5 Supported MSC telegrams

| D1-xx-xx MSC telegramy | | |
|------------------------|-----------|---|
| EEP | Registers | Description |
| D1-03-C1 | Value1 | Temperature 1 (the most updated) -20... 100 °C (x10) |
| | Value2 | Temperature 2 (the most updated) -20... 100 °C (x10) |
| | Value3 | Temperature 3 (the most updated) -20... 100 °C (x10) |
| | Value4 | 1 range -20 ... 100 °C |
| | Value5 | Indoor temperature -20... 100 °C (x10) |
| | Value6 | Repeating the sending 30, 60, 120 a 300s Solar cell (+1) battery (+0) e.g. 31 repeating the sending after 30s, solar power supply |
| D1-03-C2 | Value1 | Temperature 1 (the most updated) 0... 85 °C (x10) |
| | Value2 | Temperature 2 (the most updated) 0... 85 °C (x10) |
| | Value3 | Temperature 3 (the most updated) 0... 85 °C (x10) |
| | Value4 | 2 range 0 ... 85 °C |
| | Value5 | Indoor temperature 0... 85 °C (x10) |
| | Value6 | Repeating the sending 30, 60, 120 a 300s Solar cell (+1) battery (+0) e.g. 31 repeating the sending after 30s, solar power supply |

7 Supported profiles of device (EEP) for transmitting data

Selected RORG protocols are supported for transmitting. Numbers according to EEP are entered to transmitting registers RORG, FUNC and TYPE. Values from registers VALUE 1...7 are converted to format of selected protocol.

7.1 Supported 1BS telegrams

| D5-00-xx Contacts | | |
|-------------------|-----------|---|
| EEP | Registers | Description |
| D5-00-01 | Value1 | 0: OPEN (without battery door/window contact) 1: CLOSE |
| | Learn | 0: Data telegram 1: Learn mode |

7.2 Supported RPS telegrams

| F6-02-xx | | |
|----------|-----------|---|
| EEP | Registers | Description |
| F6-02-02 | Value1 | Rocker 1st action 0: Button A1: "Switch light on" or "Dim light up" or "Move blind open" 1: Button A0: "switch light off" or "Dim light down" or "Move blind closed" 2: Button B1: "Switch light on" or "Dim light up" or "Move blind open" 3: Button B0: "Switch light off" or "Dim light down" or "Move blind closed" |
| | Value2 | 2nd action |
| | Value3 | Energy Bow: 0 – released; 1 – pressed |
| | Value7 | It is copied directly to STATUS byte |

7.3 Supported 4BS telegrams

| A5-02-xx | | |
|----------|-----------|------------------------------|
| EEP | Registers | Description |
| A5-02-01 | Value1 | X 10 Temperature -40...0 °C |
| A5-02-02 | Value1 | X 10 Temperature -30...10 °C |
| A5-02-03 | Value1 | X 10 Temperature -20...20 °C |
| A5-02-04 | Value1 | X 10 Temperature -10...30 °C |
| A5-02-05 | Value1 | X 10 Temperature 0...40 °C |
| A5-02-06 | Value1 | X 10 Temperature 10...50 °C |
| A5-02-07 | Value1 | X 10 Temperature 20...60 °C |
| A5-02-08 | Value1 | X 10 Temperature 30...70 °C |
| A5-02-09 | Value1 | X 10 Temperature 40...80 °C |
| A5-02-0A | Value1 | X 10 Temperature 50...90 °C |
| A5-02-0B | Value1 | X 10 Temperature 60...100 °C |
| A5-02-10 | Value1 | X 10 Temperature -60...20 °C |
| A5-02-11 | Value1 | X 10 Temperature -50...30 °C |
| A5-02-12 | Value1 | X 10 Temperature -40...40 °C |
| A5-02-13 | Value1 | X 10 Temperature -30...50 °C |
| A5-02-14 | Value1 | X 10 Temperature -20...60 °C |
| A5-02-15 | Value1 | X 10 Temperature -10...70 °C |
| A5-02-16 | Value1 | X 10 Temperature 0...80 °C |
| A5-02-17 | Value1 | X 10 Temperature 10...90 °C |

| | | | |
|----------|--------|------|-------------------------|
| A5-02-18 | Value1 | X 10 | Temperature 20...100 °C |
| A5-02-19 | Value1 | X 10 | Temperature 30...110 °C |
| A5-02-1A | Value1 | X 10 | Temperature 40...120 °C |
| A5-02-1B | Value1 | X 10 | Temperature 50...130 °C |

| A5-04-xx | | | |
|----------|-----------------|--|--------------------------------------|
| EEP | Registers | Description | |
| A5-04-01 | Value1 | x 10 | Temperature 0...40 °C (0...400) |
| | Value2 | x 10 | Humidity 0...100% (0...1000) |
| | Value3 | Temperature sensor available (1) not available (0) | |
| | Value 4,5,6,7 | Not used | |
| A5-04-02 | Value1 | x 10 | Temperature -20...60 °C (-200...600) |
| | Value2 | x 10 | Humidity 0...100% (0...1000) |
| | Value 3,4,5,6,7 | Not used | |
| A5-04-03 | Value1 | x 10 | Temperature -20...60 °C (-200...600) |
| | Value2 | x 10 | Humidity 0...100% (0...1000) |
| | Value3 | Type of telegram 0: Heartbeat 1: Even Triggered | |
| | Value 4,5,6,7 | Not used | |

| A5-05-xx | | | |
|----------|-----------------|---|--|
| EEP | Registers | Description | |
| A5-05-01 | Value1 | Air pressure 500-1150hPa | |
| | Value2 | Type of telegram 0: Heartbeat 1: Even Triggered | |
| | Value 3,4,5,6,7 | Not used | |

| A5-20-xx | | | |
|----------|-----------|--|--|
| EEP | Registers | Description | |
| A5-20-01 | Value1 | Actuator position 0...100 or temperature 0...400 (0...40°C) | |
| | Value2 | Actual room temperature from GWY to actuator | |
| | Value3 | Meaning of value 1 0 – Actuator position 1 – Temperature | |
| | Value4 | 1 – run unit sequence 2 – lift set 3 – run unit sequence+left set | |
| | Value5 | 1 – valve open maintenance 2 – valve closed 10 – set point inverse 11 – valve open maintenance + set point inverse 12 – valve closed + set point inverse | |
| | Value6 | 0 – nothing 1 – summer mode | |
| | Value7 | 0 – RCU 1 – Service on | |
| | Teach-in | 0: Data telegram 1: Learning mode | |
| A5-20-04 | Value1 | Actuator position 0...100% (Valve Position) | |
| | Value2 | Temperature Set Point 10...30°C | |
| | Value3 | Wake-up Cycle | 0: 10 sec 25: 780 sec 49: 1500 sec (25min) |

| | | | | | |
|--|----------|--|--|---|---|
| | | | 1: 60 sec 2: 90 sec 3: 120 sec 4: 150 sec 5: 180 sec 6: 210 sec 7: 240 sec 8: 270 sec 9: 300 sec (5min) 10: 330 sec 11: 360 sec 12: 390 sec 13: 420 sec 14: 450 sec 15: 480 sec 16: 510 sec 17: 540 sec 18: 570 sec 19: 600 sec (10min) 20: 630 sec 21: 660 sec 22: 690 sec 23: 720 sec 24: 750 sec | 26: 810 sec 27: 840 sec 28: 870 sec 29: 900 sec (15min) 30: 930 sec 31: 960 sec 32: 990 sec 33: 1020 sec 34: 1050 sec 35: 1080 sec 36: 1110 sec 37: 1140 sec 38: 1170 sec 39: 1200 sec (20min) 40: 1230 sec 41: 1260 sec 42: 1290 sec 43: 1320 sec 44: 1350 sec 45: 1380 sec 46: 1410 sec 47: 1440 sec 48: 1470 sec | 50: 3 hrs 51: 6 hrs 52: 9 hrs 53: 12 hrs 54: 15 hrs 55: 18 hrs 56: 21 hrs 57: 24 hrs 58: 27 hrs 59: 30 hrs 60: 33 hrs 61: 36 hrs 62: 39 hrs 63: 42 hrs (max) |
| | Value4 | Measurement Control 0: Disable 1:Enable Control the temperature measurement (feed temperature + room temperature) | | | |
| | Value5 | Button Lock Control 0: Unlocked 1: Locked | | | |
| | Value6 | Display Orientation | | 0: 0° 1: 90° 2: 180° 3: 270° | |
| | Value7 | Reserved | | | |
| | Teach-in | 0: Data telegram 1: Learning mode | | | |

Learning mode Variation 3

The learning mode for MD15-FTL-HE is in the form query – answer. The gateway makes this process automatically. It is necessary to follow the procedure.

1. Fill in actuator ID to registers for transmitting channels.
2. Fill in RORG, TYPE, FUNC.
3. Set register Teach-in on 1.
4. Set Value 2 for transmitting to the register (send once after receiving).
5. Press button on actuator, the process „teach-in“ will start.

| A5-38-08 | | |
|----------|-----------|--|
| EEP | Registers | Description |
| COM ID 1 | Value1 | Command ID = 1 Switching |
| | Value2 | SW Switching Command ON/OFF Enum: 0: Off 1: On |

| | | |
|----------|----------|--|
| | Value3 | Time (in 1/10 second) 0= no time specified 1...65535: 0,1 ... 6553,5s |
| | Value4 | Duration (Execute switching command immediately and switch back after duration) 1 = Delay (Execute switching command after delay) 0: Duration 1: Delay |
| | Value5 | 0: Unlock 1: Lock Lock for duration time if time >0, unlimited time of no time specified. Locking may be cleared with „unlock“. During lock phase no other commands will be accepted or executed |
| | Teach-in | 0: Data telegram 1: Learning mode |
| COM ID 2 | Value1 | Command ID = 2 Dimming |
| | Value2 | SW Switching Command ON/OFF Enum: 0: Off 1: On |
| | Value3 | Dimming value (absolute [0...255] or relative [0...100]) 0...255 0...100 % |
| | Value4 | Dimming Range EDIM R Dimming Range 0: Absolute value 1: Relative value |
| | Value5 | Ramping time RMP Ramping time in seconds, 0 = no ramping, 1... 255 = seconds to 100% 0...255 0...255 s |
| | Value6 | Store final value STR Store final value 0: No 1: Yes |
| | Teach-in | 0: Data telegram 1: Learning mode |

7.4 Supported VLD telegrams

| D2-01-XX | | |
|------------|-----------|---|
| EEP | Registers | Description |
| CMD – 0x01 | Value1 | CMD = 1 Actuator Set Output |
| | Value2 | Output value: 0 – 100% (0=OFF; 100=ON) |
| | Value3 | I/O Channel 0 – 29 30 = All channels 31 = Input channel (from mains supply) |
| | Value4 | Diming 0x00: Switch to new output value 0x01: Dim to new output value – dim timer 1 0x02: Dim to new output value – dim timer 2 0x03: Dim to new output value – dim timer 3 0x04: Stop dimming |
| | Value5..7 | Not Used |
| | Teach-in | 0 |
| CMD – 0x02 | Value1 | CMD = 2 Actuator Set Local |
| | Value 2 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value 3 | Dim timer 1 - fast 0: Not used 1...15: Dim timer 1 [0,5 ... 7,5s / steps 0,5s] |

| | | |
|--|----------|---|
| | Value4 | Dim timer 2 - medium 0: Not used 1...15: Dim timer 1 [0,5 ... 7,5s / steps 0,5s] |
| | Value5 | Dim timer 3 - slow 0: Not used 1...15: Dim timer 1 [0,5 ... 7,5s / steps 0,5s] |
| | Value6 | 0: Disable taught-in devices (with different EEP) 1: Enable taught-in devices (with different EEP) 0: Over current shut down: static off 10: Over current shut down: automatic restart 0: Reset over current shut down: not active 100: Reset over current shut down: trigger signal 0: Disable local control 1000: Enable local control Sample: 1011 Enable local control; Reset over current shut down: not active; Over current shut down: automatic restart; Enable taught-in devices (with different EEP) |
| | Value7 | Default state DS 0: Default state: 0% or OFF 1: Default state: 100% or ON 2: Default state: remember previous state 3: Not used 0: Disable Power Failure Detection 10: Enable Power Failure Detection 0: User interface indication: day operation 100: User interface indication: night operation Sample: 103 User interface indication: night operation; Disable Power Failure Detection; Default state: Not used |
| | Teach-in | 0 |

| D2-01-XX | | |
|-------------------|-----------|---|
| EEP | Registers | Description |
| CMD – 0x03 | Value1 | CMD = 3 Actuator Status Query |
| | Value 2 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value3..7 | Not Used |
| | Teach-in | 0 |
| CMD – 0x05 | Value1 | CMD = 5 Actuator Set Measurement |
| | Value2 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value3 | Unit UN 0: Energy [Ws] 1: Energy [Wh] 2: Energy [KWh] 3: Power [W] 4: Power [KW] |
| | Value4 | Measurement delta to be reported 0...4095: 0...4095 |

| | | |
|-------------------|-----------|---|
| | Value5 | Maximum time between two subsequent actuator messages MAT Measurement Response messages [10s] 1...255: 10...2550s |
| | Value6 | Minimum time between two subsequent actuator messages MIT Measurement Response messages[s] 1...255: 1...255s |
| | Value7 | 0: Report measurement: query only 1: Report measurement: query /auto reporting 0: Reset measurement: not active 10: Reset measurement: trigger signal 0: Energy measurement 100: Power measurement |
| | Teach-in | 0 |
| CMD – 0x06 | Value1 | CMD = 6 Actuator Measurement Query |
| | Value2 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value3 | 0: Query energy 1: Query power |
| | Value4..7 | Not Used |
| | Teach-in | 0 |
| CMD – 0x08 | Value1 | CMD = 8 Actuator Set Pilot Wire Mode |
| | Value2 | Pilotwire mode 0: Off 1: Comfort 2: Eco 3: Anti-freeze 4: Comfort-1 5: Comfort-2 |
| | Value3..7 | Not Used |
| | Teach-in | 0 |

| | | |
|-------------------|------------------|---|
| D2-01-XX | | |
| EEP | Registers | Description |
| CMD – 0x09 | Value1 | CMD = 9 Actuator Pilot Wire Mode Query |
| | Value2..7 | Not Used |
| | Teach-in | 0 |
| CMD – 0x0A | Value1 | CMD = 11 Actuator Set External Interface Settings |
| | Value2 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| | Value3 | Auto OFF Timer 0: Timer deactivated 1...65534: 0.1...6553.4 s 65535: Does not modify saved value |
| | Value4 | Delay OFF Timer 0: Timer deactivated 1...65534: 0.1...6553.4 s 65535: Does not modify saved value |
| | Value5 | External Switch/Push Button (External interface mode) 0: Not applicable 1: External Switch 2: External Push Button |

| | | |
|-------------------|----------|--|
| | | 3: Auto detect |
| | Value6 | 2 – state switch - Switching state 0: Change of key state sets ON or OFF 1: Specific ON/OFF positions. ON when contacts are closed. OFF when contacts are open. |
| | Value7 | Not Used |
| | Teach-in | 0 |
| CMD – 0x0C | Value1 | CMD = 12 Actuator External Interface Settings Query |
| | Value2 | I/O channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Input channel (from mains supply) |
| CMD – 0x0F | Value1 | CMD = 15 Actuator Set Dimming Limits |
| | Value2 | ECID – Extended Command ID = 0 Setting min, max ID=1 Actuator dimming limits query |
| | Value3 | Output channel 0...29: Output channel (to load) 30: All output channels supported by the device 31: Reserved |
| | Value4 | (only ECID = 0) MAXV Set dimming maximum value (Maximum value is set to 100%) |
| | Value5 | (only ECID = 0) MINV Set dimming minimum value (Minimum value is set 0%) |

| D2-05-XX Blinds Control for Position and Angle | | |
|--|------------|--|
| EEP | Registry | Popis |
| CMD – 0x01 | Value1 | CMD = 1 Goto command |
| | Value2 | Channel address Channel (1) |
| | Value3 | Vertical position 0...100: 0...100 % 127: Do not change |
| | Value4 | Rotation angle Enum: 0...100: 0...100 % 127: Do not change |
| | Value5 | How to adjust the internal positioning tracker before going to the new position 0: Go directly to POS/ANG 1: Go up (0%), then to POS/ANG 2: Go down (100%), then to POS/ANG 3 ... 7:Reserved |
| | Value6 | LOCK Set/reset locking modes 0: Do not change 1: Set blockage mode 2: Set alarm mode 3 ... 6:Reserved 7: Deblockage |
| | Value7 | Not used |
| | Teach-in | 0 |
| CMD – 0x02 | Value1 | CMD = 2 Stop |
| | Value 2 | Channel address Channel (1) |
| | Value3...7 | Not used |
| | Teach-in | 0 |
| CMD – 0x03 | Value1 | CMD = 3 Query Position and Angle |

| | | |
|-------------------|------------|---|
| | Value 2 | Channel address Channel (1) |
| | Value3...7 | Not used |
| | Teach-in | 0 |
| CMD – 0x05 | Value1 | CMD = 5 Set parameters |
| | Value 2 | Channel address Channel (1) |
| | Value3 | Measured duration of a vertical run 0 ... 499: Reserved 500...30 000: 5000...300000 ms (500 = 5s... 30 000 = 300s) 32767 (0x7FFF): -> No change |
| | Value4 | Measured duration of rotation 1...254: 10...2540 ms (1 = 0,01s ... 254 = 2,54s) 0: No rotation 255: -> No change |
| | Value5 | Set alarm action Besides locking all other commands entering the alarm mode results in 0: No action 1: Immediate stop 2: Go up (0%) 3: Go down (100%) 4 ... 6:Reserved 7: -> No change |
| | Value6...7 | Not used |
| | Teach-in | 0 |

VLD Teach-in process

For learning process VLD, the command UTE is used.

| D4-XX-XX | | |
|----------|-----------|---|
| EEP | Registers | Description |
| | Value1 | DB6.7 0b0 Unidirectional communication (EEP operation) 0b1 Bidirectional communication (EEP operation) DB6.6 0b0 EEP Teach-In-Response message expected 0b1 No EEP Teach-In-Response message expected DB6.5 ... DB6.4 0b00 Teach-in request 0b01 Teach-in deletion request 0b10 Teach-in or deletion of teach-in, not specified 0b11 Not used |
| | Value 2 | DB_5 Number of individual channel to be taught in |
| | Value3 | DB_4 MID (8LSB) Manufacturer-ID (8LSB) |
| | Value4 | DB_3 MID (3MSB) Manufacturer-ID (3MSB) |
| | Value5 | DB_2 TYPE |
| | Value6 | DB_1 FUNC |
| | Value7 | DB_0 RORG |

8 Saving characters for channels descriptions

Short description with length 40 characters can be connected to each transmitting (60) and receiving (40) channel. These characters are saved in registers with the address 10000-20000.

| | No | R/W | Description |
|--------------|-------|-----|------------------------------|
| Device Rx 0 | 10000 | R | 0 |
| | 10001 | R | 12 (Length) |
| | 10002 | R/W | „T“ (First ascii char 0x54) |
| | 10003 | R/W | „e“ (0x65) |
| | ... | R/W | „mperatu“ |
| | 10011 | R/W | „r“ (0x72) |
| | 10012 | R/W | „e“ (0x65) |
| | 10013 | R/W | „1“ (0x31) |
| | ... | R/W | 0 |
| | 10099 | R | 0 |
| Device Rx 1 | 10100 | R | 0 |
| | 10101 | R | 12 (Length) |
| | 10102 | R/W | „T“ (First ascii char 0x54)) |
| | 10103 | R/W | „e“ (0x65) |
| | ... | R/W | „mperatu“ |
| | 10111 | R/W | „r“ (0x72) |
| | 10112 | R/W | „e“ (0x65) |
| | 10113 | R/W | „2“ (0x32) |
| | ... | R/W | 0 |
| | 10199 | R | 0 |
| Device Tx 59 | 19900 | R | 0 |
| | 19901 | R | 9 (Length) |
| | 19902 | R/W | „A“ (First ascii char 0x41)) |
| | 19903 | R/W | „c“ (0x63) |
| | ... | R/W | „tuat“ |
| | 19911 | R/W | „o“ (0x6F) |
| | 19912 | R/W | „r“ (0x72) |
| | 19913 | R/W | „2“ (0x32) |
| | ... | R/W | 0 |
| | 19999 | R | 0 |

9 Revision history

Tab. Document revision history

| Date | Version | Modifications made |
|--------------------|---------|--|
| 2nd March 2018 | 1.3 | Supported 4BS telegrams (chapter 7.1) Supported 4BS telegrams (chapter 8.3) |
| 10th October 2018 | 1.4 | Repair connection RS 232, text corrections |
| 25th October 2018 | 1.5 | Enlargement of supported MSC telegrams for PRESSAC 3 channel temperature |
| 17th December 2018 | 1.6 | Repair of technical information |
| 22nd February 2019 | 1.7 | The protocol D2-01-0C added |
| 4th March 2019 | 1.8 | The protocol D2-01-0F (page....) added |
| 10th May 2019 | 1.9 | EEP protocols and description of saving channel descriptions added |
| 13th August 2019 | 1.10 | Transmitting protocols A5-04-(01,02,03) a A5-05-01 added |
| 21st May 2020 | 1.11 | D2-03-0A added |
| 30th January 2023 | 1.12 | Text corrections |